

User Manual for HELLAS SAT Terminal

version 1.9.2.4



© 2008 Newtec cy.

Any unauthorised duplication or distribution is expressly prohibited. Unless specifically authorised no part of this document may be reproduced in any form without the prior written consent of Newtec Cy.

Newtec cy
Laarstraat 5
9100 Sint-Niklaas, Belgium

General: +32 (0)3 780 65 00
www.newtec.eu
Fax +32 (0)3 780 65 49
General: general@newtec.eu

WHO SHOULD READ THIS

This User Manual is intended for the user of the HELLAS SAT terminal. It provides safety precautions, a description of the HELLAS SAT terminal and a detailed description of how to use the GUI (Graphical User Interface).

First-line troubleshooting information is also included.

Version history and applicability

Document version	Date	Subject version	Author	Comments
1.9.2	21/11/2007	1.6		Creation for this software release

Related documentation

The details of the installation and pointing of the HELLAS SAT dish are described in the Point&Play set-up manual.

IMPORTANT SAFETY PRECAUTIONS



Install the HELLAS SAT modem and antenna according to local regulations

- Before installing the HELLAS SAT modem, please make sure that your electrical outlet is properly wired and your computer equipment is properly grounded. Consult with a licensed electrician if in any doubt;
- Please read and understand all operating instructions in your user's guide located in the HELLAS SAT modem shipping box;
- Please read and understand all safety precautions prior to connecting any cables to the HELLAS SAT modem.



Always observe the following warnings:

- There are no user-serviceable parts in your system. There are potentially lethal voltages inside the equipment. It should only be opened by a technician trained and certified to service the product;
- RF Radiation Hazard. The transmitting equipment is capable of generating RF levels above the maximum permissible exposure level. Do not enter the radiation beam pattern of the transmitter feed horn and/or antenna dish when the transmitter is on.
Keep the space between feed horn and reflector clear!
- When the HELLAS SAT modem is powered on, DC voltages are present on the rear panel Tx and Rx connectors;
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture. The apparatus must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus;
- Postpone HELLAS SAT modem installation until there is no risk of thunderstorm or lightning activity in the area;
- To prevent electrical shock, if the unit is provided with a polarized plug, do not connect the plug into an extension cord, receptacle or other outlet unless the plug can be fully inserted with no part of the blades exposed;
- The in-line power supply input power cord must be connected to a properly grounded three-prong AC outlet. Do not use adapter plugs or remove the grounding prong from the plug;
- The in-line power supply input power cord must not be used when damaged in any form!



Always observe the following cautions:

- Always use the in-line power supply with the HELLAS SAT modem. Using a different power supply may cause equipment damage;
- To ensure regulatory and safety compliance, use only the provided power and interface cables or cables which conform to the specifications within this manual;
- Do not open the unit. Do not perform any servicing other than that contained in the installation and troubleshooting instructions. Refer all servicing to qualified service professionals;
- Avoid damaging the HELLAS SAT modem with static, by first touching the coaxial cable connector when it is attached to the earth grounded coaxial cable wall outlet. Always first touch the coaxial cable connector on the HELLAS SAT modem when you are disconnecting or re-connecting your Ethernet cable from the HELLAS SAT modem or your computer;
- To prevent overheating, do not block the ventilation holes on the sides and top of the unit;
- Only wipe the unit with a clean, dry cloth. To avoid equipment damage, never use fluids or similar chemicals. Do not spray cleaners directly on the unit or use forced air to remove dust;
- The user should install an AC surge arrestor in the AC outlet to which this device is connected. This to avoid damaging the equipment by local lightning strikes and other electrical surges;



Notices:

- This product was qualified under test conditions that included the use of the supplied cable between the components. To be in compliance with regulations, the user must use this cable – or equivalent – and install it properly;
- Different types of cord sets may be used for connections to the main supply circuit. Use only a main line cord that complies with all product safety requirements of the country of use;
- Installation of this product must be in accordance with national wiring codes;

TABLE OF CONTENTS

Who Should Read This.....	ii
Important Safety Precautions.....	iii
Table of Contents	v
1 Introduction	7
1.1 HELLAS SAT Terminal Documentation.....	7
1.2 About the HELLAS SAT Terminal.....	7
1.3 Installation Tasks	8
2 Getting to know your HELLAS SAT Terminal	9
2.1 The IPmodem	9
2.1.1 The IPmodem Front Panel	9
2.1.2 The IPmodem Back Panel.....	9
2.1.3 The Power Supply	10
2.1.4 Cables.....	10
2.2 The iLNB	14
3 Terminal Web Interface	15
3.1 Prepare the Settings of Your Computer	15
3.2 How to Access the Terminal Web Interface?	15
3.2.1 With Satellite Connection	15
3.2.2 No Satellite Connection	16
3.3 Overview Web Interface	16
3.3.1 General Layout.....	16
3.3.2 Menu Structure	17
3.4 Reboot the IPmodem.....	18
3.5 LEDs in the Status Bar	18
3.5.1 Ethernet LED	18
3.5.2 Satellite LED	19
3.5.3 Software LED	19
3.6 Status Page	19
3.6.1 Introduction.....	19
3.6.2 Overview.....	20
3.6.3 Interface Statistics	23
3.7 Configuration.....	23
3.7.1 Ethernet Interface	23

3.7.2	Satellite Interface	25
3.7.3	Multicast	29
3.8	Device	32
3.8.1	Software	32
3.8.2	Hardware	35
3.9	Test	35
3.9.1	On Screen Test Results	36
3.9.2	Filed Test Results	37
3.9.3	Test Descriptions	38
4	Appendix A - Local Network Configuration	40
4.1	Connect a Single Computer to the IPmodem	40
4.2	Connect a LAN to the IPmodem	41
5	Appendix B – Checking and Changing your IP Settings	42
5.1	Introduction	42
5.2	Windows Vista	42
5.3	Windows XP	45
5.4	Mac OS X	46
6	Appendix C – Troubleshooting Guide	49
7	Appendix D – Acronyms	52
8	Appendix E – Specifications	54
8.1	IPmodem (indoor unit)	54
8.2	iLNB (outdoor unit)	55
9	Appendix F - Licenses	57

1 INTRODUCTION

1.1 HELLAS SAT Terminal Documentation

The HELLAS SAT Terminal documentation consists of:

The HELLAS SAT Terminal Documentation exists out of three documents:

1. This document, describing the features and terminal web interface of the IPmodem;
2. The Point and Play manual describing the installation and pointing of your antenna;
3. The pointing data, consisting of the information you need to point your antenna to the correct position.

1.2 About the HELLAS SAT Terminal

The HELLAS SAT Terminal is state of the art equipment allowing cost effective, plug & play connection to an extended variety of IP-based applications.

The HELLAS SAT Terminal consists of:

- A small size, high quality, easy to install satellite antenna (79 cm);
- An interactive LNB (iLNB);
- An IPmodem providing an Ethernet connection to the computer of the end-user or Local Area Network (LAN).



Figure 1– HELLAS SAT Terminal

The interactive iLNB low power equipment is light weight, easy-to-install and highly reliable. All parts are built using state-of-the-art microwave design that guarantees an unequalled reliability for many years.

Connected to the interactive iLNB by means of transmit and receive cables, the high speed IP modem provides an asymmetrical 2-way broadband access to IP applications (e.g. Broadband Internet Access). Its small size, in line with the best practice in the telecom and IT industries, makes it suited for any type of user, business or consumer.

1.3 Installation Tasks

To ensure proper installation of the HELLAS SAT Terminal, the following tasks must be performed.

These tasks are described in detail in the Point&Play Manual of your IPmodem.

- Prepare the installation site and unpack the devices;
- Select a suitable location to set up the antenna. A clear view to the South must be available (satellite position). The distance between the antenna and the IPmodem may not exceed 50 metres. Ideally, this distance shall not exceed 30 metres if making use of the cable provided with the HELLAS SAT Terminal;
- Set up the antenna pole and attach the masthead to it;
- Attach the antenna to the masthead;
- Attach the iLNB to the antenna;
- Place the IPmodem in a clean, dry room at maximum 30 m (cable length) from the antenna site;
- Connect the IPmodem to the iLNB using the Rx and Tx coax cables;
- Connect a computer (desktop or laptop) to the IPmodem;
- Power the IPmodem;
- Use a web browser on the computer to access the Terminal Web Interface;
- Point the antenna towards the correct satellite, fine-tune pointing and verify the cross polarisation;
- Configure the terminal using the web interface and/or check the connectivity.

2 GETTING TO KNOW YOUR HELLAS SAT TERMINAL

2.1 The IPmodem

2.1.1 The IPmodem Front Panel



Figure 2– The IPmodem Front Panel

Nr	What	Description
(1)	Power LED	Green continuous – when powered up.
(2)	Warning LED	Yellow continuous – when the terminal is not logged on to the satellite network.
(3)	LAN indicator LEDs	Left: Green continuous – link layer status. Right: Green blinking – Ethernet frames are received or transmitted.
(4)	Rx indicator LED	Green continuous – forward satellite signalling receiving.
(5)	Tx indicator LED	Green blinking – traffic transmitting via the satellite link.

Table 2 – Description of the Elements on the IPmodem Front Panel

2.1.2 The IPmodem Back Panel

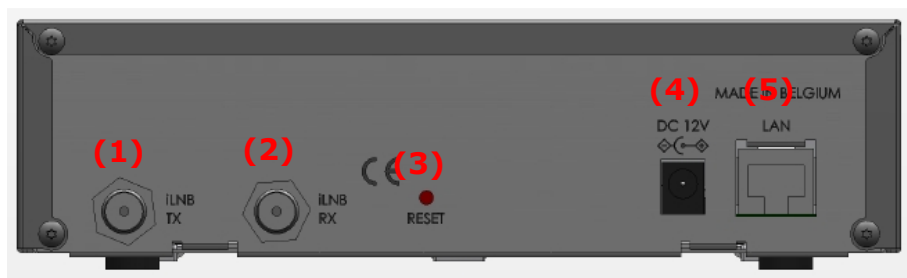


Figure 3– The IPmodem Back Panel

Nr	What	Description
(1)	Tx connector	Indoor connection for the transmit coax cable.
(2)	Rx connector	Indoor connection for the receive coax cable.
(3)	Reset button	Reboot: press once briefly (hold less than 5 seconds); Factory Reset: press and hold for more than 5 seconds. Resetting will also reboot the terminal and change all the IP-settings back to the default factory settings.
(4)	15V power cable connector	Power connector (5.5/2.5mm plug).
(5)	Ethernet cable connector	Connection for the LAN, type RJ-45 (Ethernet cable).

Table 3 - Description of the Elements on the IPmodem Back Panel

2.1.3 The Power Supply



Figure 4 - IPmodem Power Supply

- Universal input range: nominal 100 – 240 Volt / 50 – 60 Hz;
- IEC320/C8 socket;
- CE approved;
- Output 15V / 2A;
- Plug 5,5 x 2,5 mm.

2.1.4 Cables

2.1.4.1 Ethernet Cables

Included with your HELLAS SAT Terminal is a crossed red Cat-5 Ethernet cable with RJ-45 connectors. This cable is approximately 2 m long. It will be used to connect the IPmodem to your computer.



The IPmodem Ethernet connection also supports auto cross-over. Alternatively, a straight Ethernet cable can be used.

2.1.4.2 Coaxial Cables

There are two separate cables between the antenna and the indoor equipment: the receive cable (Rx) and transmit cable (Tx). These coaxial cables (coax) are approximately 1 cm in diameter and are 30 m long. Delivered with your system is a combined twin cable with Rx and Tx cable attached to each other.

The outdoor F-connectors must be compression types of durable construction and each have a rubber boot to effectively seal-off the connection when mated with the iLNB.

The F-connectors are not attached to the cable yet for easy installation of the cable. Four screw-on connectors are delivered with the coax cable.

Specifications of the coaxial cable:

- RG6 foam equivalent;
- Specified up to 3GHz;
- F-connectors.



For an installation that requires a cable longer than 30 metres, another cable (set) can be used. The overall requirement is then:

Attenuation @ 3000 MHz < 20 dB

The provided cable has an attenuation of ~ 14 dB @ 3000MHz (30 m of cable).



Figure 5- Coaxial Twin Cable with Connectors Attached

2.1.4.3 The Pointing Aid

The pointing device, with the functionality as shown in Figure 6, is delivered with an earphone as displayed in Figure 7 and appropriate battery.

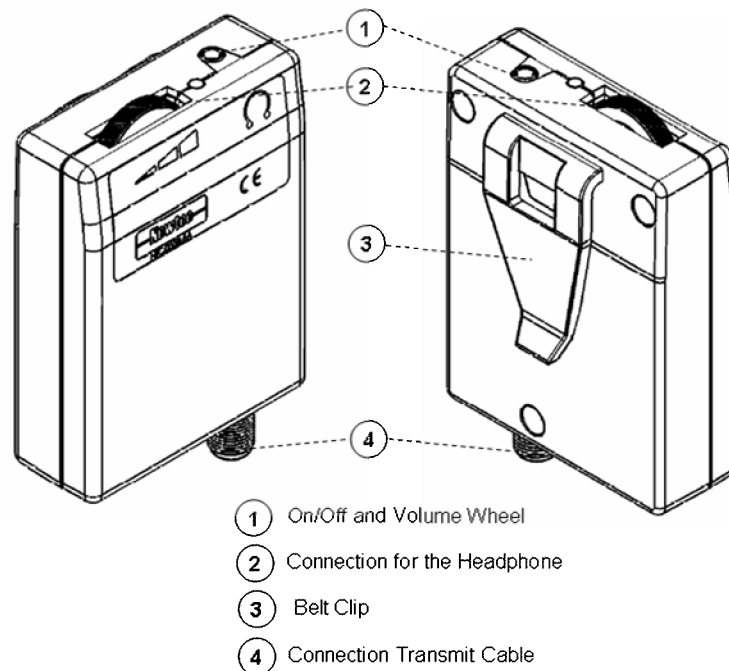


Figure 6 – Pointing Device

The dimensions of the device are:

- Height: 29.02 mm;
- Length: 81.82 mm;
- Width: 61.56 mm.



Figure 7 – Earphone

2.1.4.4 Antenna

Overview

The antenna comprises five parts:

- Antenna pole;
 - See below for the antenna pole requirements;
- Masthead;

- Completely pre-assembled;
- Elevation and azimuth fine-pointing adjust cams.
- Antenna reflector (dish);
 - 79 x 85 cm pressed sheet metal with heavy-duty rim;
 - Steel is passivated and epoxy powder coated;
 - Fixed with 4 bolts.
- Feed arm;
 - Feed Arm is a steel part, precision formed;
 - Steel is passivated and epoxy powder coated;
 - Fixed to masthead with 2 x M6 bolts;
 - Feed clamp snaps inside feed arm;
 - Feed clamp is Glass-Filled Nylon;
 - All plastic parts are UV-stabilised.
- iLNB (see section 2.2 for more information).

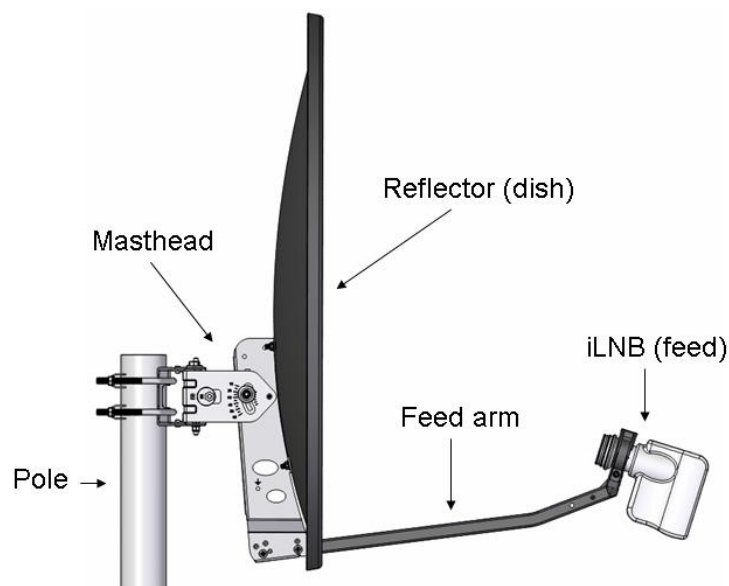


Figure 8 - Antenna Overview & Elements

Antenna Pole Requirements

When selecting an antenna pole, keep in mind the following dimensions:

- Dimensions;
 - Minimum diameter: 40mm;
 - Maximum diameter: 70mm;
 - Also see Figure 9 for more dimensions.
- Galvanised steel;
- Solid base / fixation.

The mechanical forces that need to be considered in the fixation of the antenna pole are shown in the picture below.

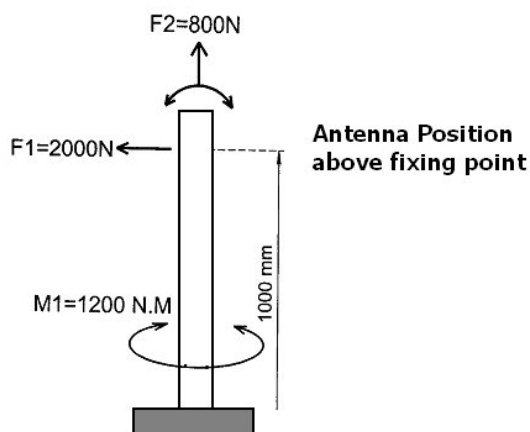


Figure 9 - Antenna Pole Stress and Forces

2.2 The iLNB

The iLNB has an integrated casing and is fully sealed except for its ventilation slots.



Figure 10 - iLNB > Perspective and Bottom View

Nr	What	Description
(1)	Feed horn	Radiating feed horn of the iLNB, pointed towards reflector.
(2)	Tx connector	Outdoor connection for the transmit coax cable.
(3)	Rx connector	Outdoor connection for the receive coax cable.

Table 4 - Description Elements of the iLNB

3 TERMINAL WEB INTERFACE

3.1 Prepare the Settings of Your Computer

Check if your computer is set to DHCP. This way the computer can receive an IP address from the IPmodem.

Follow the procedure in Appendix B – Checking and Changing your IP Settings to check and/or change your IP settings.

3.2 How to Access the Terminal Web Interface?

3.2.1 With Satellite Connection

In the normal operational mode a connected computer should be configured in DHCP mode to retrieve an IP address automatically and to retrieve the DNS server. The terminal acts as a DHCP server for the computer.

Browse to the web interface

➤ Type the IPmodem's address in the address bar of the browser: 192.168.1.1.

You will be re-directed to the Status page of the terminal.




Figure 11 – The IPmodem's Address in the Address bar of the browser



Alternatively, use the Default Gateway address to reach the web interface. See Appendix A – Local Network Configuration for more information.



It is possible that **during first logon** the terminal will perform an upgrade with the latest software since you cannot login using the old SW. This process can take up to **ten minutes**. **You may NOT interrupt the terminal yourself during this period, e.g. by rebooting or powering down.**

If newer software is available, the terminal will:

- Download this software;
- Install this software
- Reboot the terminal;
- Logon to the network again.

3.2.2 No Satellite Connection

Make sure your computer is able to receive an IP address via DHCP, by following the procedure in Appendix B – Checking and Changing your IP Settings.

When the terminal is not linked to the satellite network, after three minutes, the computer will automatically receive its IP address, via DHCP, from the IPmodem and you will then be able to browse the web interface:

If no DHCP address is assigned to your terminal: remove the Ethernet cable from your computer, wait a few seconds, and plug the Ethernet cable back into your computer.

➤ Type the IPmodem's address in the address bar of the browser: 192.168.1.1.

You will be redirected to the Status page of the terminal.

If the problem remains, you need to assign a static IP address to your computer by following the procedure in Appendix B – Checking and Changing your IP Settings.

3.3 Overview Web Interface

3.3.1 General Layout

Newtec
SHAPING THE FUTURE OF SATELLITE COMMUNICATIONS

Air MAC address: 00:06:39:00:10:77
Logged in from Hub
(Reboot)

Menu

- Status
- Configuration
 - Ethernet Interface
 - Satellite Interface
 - Multicast
- Device
 - Software
 - Hardware
- Test

Status

Overview

- Modem State:** operational
- Demodulator:** -68.8 dBm, E_s/N_0 : 11.8 dB, * Sat3Play Ops Platf
- Software Version:** 1.6.3.0

Pointing

Your antenna is pointed. Click the Restart Pointing button to restart the pointing procedure.
Do not start pointing without pointing documentation!

Interface Statistics

Interface		bytes	packets	errors	dropped
Ethernet Interface	RX	4244859	41405	0	0
	TX	10828015	41774	0	0
Satellite Interface	RX	865830	11218	0	0
	TX	914683	5106	540	540

Figure 12 – Page Layout of Web Interface

Each of the web interface pages contains the same elements.

- **A – Banner**

The banner contains the Newtec logo and shows the Air MAC address.

- **B – Status bar**

The status bar always shows the most important status LEDs. This information will be specified in the body of the Status page.

- **C – Menu structure**

On the left hand side of the page the site navigation is found. Click an item to select it. The menu structure may differ depending on your login status.

- **D – Body**

The actual content of the web interface is shown in the body. It always shows the page title and one or more content blocks or forms.

3.3.2 Menu Structure

The menu structure of the web interface of the web interface is described below (see Figure 13).

- **Status**

Check on the device and network status.

- **Configuration**

- **Ethernet Interface**

- Check and alter the Ethernet interface configuration.

- **Satellite Interface**

- Check and alter the Satellite interface configuration.

- **Multicast**

- Check and alter the Multicast configuration.

- **Device Interface**

- **Software**

- Check on or alter the software version.

- **Hardware**

- Check the Hardware version.

- **Test**

- Run tests on the device.

Menu
► Status
Configuration
Ethernet Interface
Satellite Interface
Multicast
Device
Software
Hardware
Test

Figure 13 - Menu Structure for the Normal User

3.4 Reboot the IPmodem



See section 2.1.2 for similarities with the hardware button reboot.



Figure 14 – Location of the Reboot Link

- Click the [Reboot] link at the right of the status bar to reboot the terminal.

Two options are provided:

- **Normal Reboot:**
This will trigger a normal device reboot.
- **Factory Reset:**
This will force a factory reset of the terminal. The following settings are reset to default values: management IP address and netmask.

- Choose one of the above options.

The terminal will reboot and return to the Status page. This may take up to one minute, including satellite link initialisation.



The reboot of the terminal is needed when a (re)configuration has been performed. Changes may not take effect until after the next reboot

3.5 LEDs in the Status Bar

3.5.1 Ethernet LED

The **Ethernet** LED gives the general status of the Ethernet connection to the IPmodem.

LED colour code	Description
Red	Connection is not OK.
Yellow	Connection is OK, but no DHCP address is given.
Green	A DHCP address is given and the connection is OK.

Table 5 - Status LEDs > Ethernet

3.5.2 Satellite LED

The **Satellite** LED gives the general status of the Satellite connection to the IPmodem.

LED colour code	Description
Red	No connectivity, no valid signal received.
Yellow	A valid signal was received. The terminal is busy logging in on the satellite network.
Green	The system is operational and the user is logged in on the satellite network.

Table 6 - Status LEDs > Satellite

3.5.3 Software LED

The **Software** LED gives the general status of the installed software or the updates.

LED colour code	Description
Red	The terminal has a newer software version than the running software version, and The newer software version was not selected because the software validation process failed. See Appendix C – Troubleshooting Guide for possible actions and follow-up.
Yellow	The terminal is retrieving new software via satellite. This can take up to 10 minutes.
Green	No problem. The terminal is running with the latest software version.

Table 7 - Status LEDs > Software

3.6 Status Page

3.6.1 Introduction

There are three parts to the Status Page as shown in Figure 15, which are described in more detail in the following sections:

- Overview:
This part gives an overview of the IPmodem, demodulator and software state.
- Pointing:
This part gives an overview of the pointing status and pointing carrier selection.

- **Interface Statistics:**
This part gives an overview of the IP modem statistics.

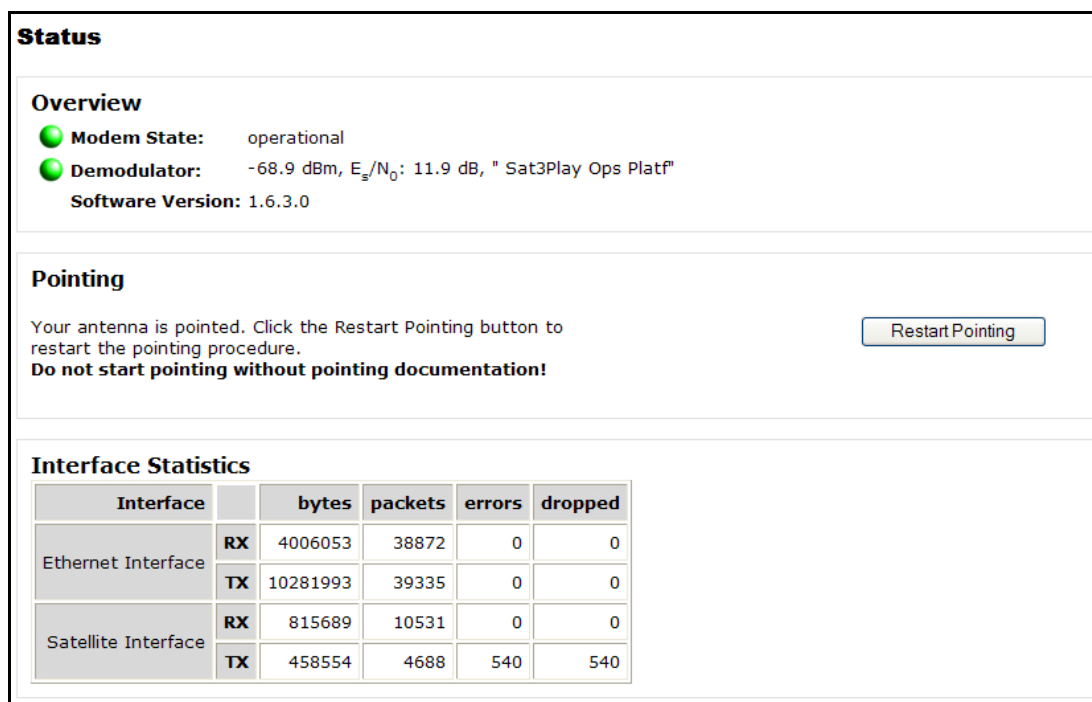


Figure 15 – Status Page

3.6.2 Overview

3.6.2.1 Modem State

The IPmodem state is indicated by a coloured LED and a state description. For the LED colour code, refer to Table 6. The possible modem state descriptions are given below.

Modem state	Description
Satellite network lookup	The terminal is looking for the satellite network.
Synchronising	The terminal found the satellite network and time synchronisation.
Synchronised	The terminal is synchronised and can directly log in on the satellite network when IP traffic is received via the Ethernet interface.
Network login	The terminal is trying to log in on the satellite network.
Operational	The terminal is logged in.

Table 8 - Status Page > Modem State

3.6.2.2 Demodulator

The Demodulator state is indicated by a coloured LED and a state description.

LED colour code	Description
Green	The demodulator is locked.
Red	The demodulator is not locked.

Table 9 - Status Page > Demodulator LED

The demodulator state is built as follows (see Table 10 for more details):

- *-95.0 dBm, Es/No: 23.2 dB, <Satellite network name>*

Demodulator label value	Description
y dBm	Indication of the received signal strength expressed in dBm. This indication can change when going from pointing mode to operational mode.
Es/No	Es/No is an indication of the received signal quality expressed in dB. This indication can change when going from pointing mode to operational mode.

Table 10 - Status Page > Demodulator Labels

3.6.2.3 Info by Error State

An error message can be displayed. This error message displays the current error status and will be reset when the terminal has entered the satellite network and the terminal is operational.



Please refer to Appendix C – Troubleshooting Guide for more details on possible errors and actions needed to resolve the occurring error

3.6.2.4 Software Version

The running software version is indicated by its version number. See also Appendix C – Troubleshooting Guide.

3.6.2.5 Pointing

This section of the web interface displays information on the pointing status of the terminal.

The following status can be viewed:

- Status when the antenna is not pointed as shown in Figure 16, giving the option to start pointing or to skip pointing. Where two pointing carriers are available,

one can choose the used carrier as shown in Figure 17.

- Status during the pointing of the antenna; see Figure 18. Click on Pointing Completed when the antenna is pointed;
- Status when pointed successfully or pointing skipped as shown in Figure 19. This is the status during normal operation of the terminal after pointing;
- Figure 20 indicates the status display after unsuccessful pointing.



For more details about the functioning of these buttons and navigation between screens we refer to the Point&Play manual

Figure 16 – Web Interface > Status when not Pointed – One pointing Carrier

Figure 17 – Web Interface > Status when not Pointed – Two pointing Carriers

Figure 18 – Web Interface > Pointing

Figure 19 - Web Interface > Status when Pointed or Pointing is Skipped


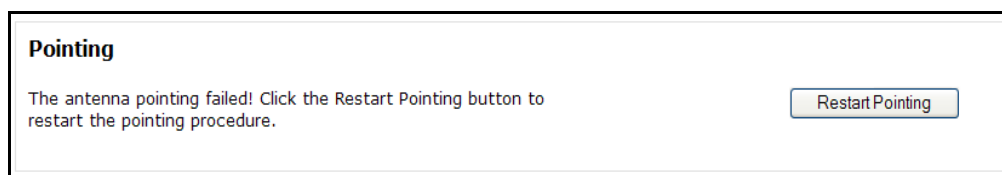


Figure 20 – Web interface > Pointing Failed



During normal operation the  button is shown and should only be used in case pointing documentation is available and the antenna must be re-pointed.

3.6.3 Interface Statistics

Modem state		Description
Interfaces	Ethernet interface	User side interface (Ethernet frames)
	Satellite interface	Satellite side interface (IP packets)
Directions	Rx	Receive
	Tx	Transmit
Statistics	Bytes	Total number of received (or transmitted) bytes
	Packets	Received (or transmitted) Ethernet frames or IP packets
	Errors	Number of occurred errors
	Dropped	Dropped Ethernet frames or IP packets

Table 11 - Status Page > Interface Statistics

3.7 Configuration



The reboot of the terminal is needed when a (re)configuration has been performed. Changes may not take effect until after the next reboot.

3.7.1 Ethernet Interface

This section describes the interface between the computer and the IPmodem.

3.7.1.1 View the Ethernet Interface Configuration

Figure 21 - Web Interface > View Configuration Ethernet Interface

3.7.1.2 The Parameters of the Ethernet Interface

The displayed parameters and their description are shown below.

Parameter	Description
Eth MAC address	MAC address of the Ethernet interface
Management IP address	Management IP address of the Ethernet interface
Netmask	Network range for the user's LAN

Table 12 - Configuration Page > Ethernet Interface Parameters

3.7.1.3 Modify the Ethernet Interface Configuration

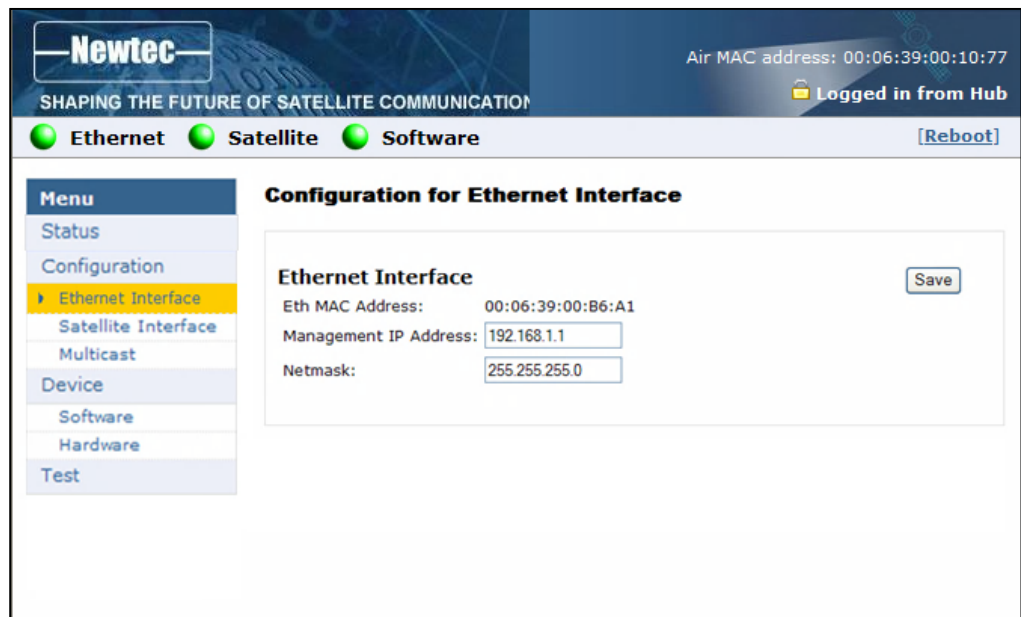


Figure 22 - Web Interface > Edit Configuration Ethernet Interface

- Click on **Edit** in the Web Interface > View Configuration Ethernet interface (**Error! Reference source not found.**) to change the Ethernet Settings.
- Edit the parameters to be changed.
- Click on **Save** in the Web Interface > Edit Configuration Ethernet interface (**Error! Reference source not found.**) to save the new settings.

The Ethernet interface configuration is now saved!

3.7.2 Satellite Interface



These settings may only be changed upon advice of your ISP!

3.7.2.1 Introduction

This section describes the interface settings between the terminal and the satellite.

Every satellite interface setting consists of:

Initial Receive Carrier

This is the initial receive carrier via which the IPmodem will try to gain access to the network.

Pointing Carrier

This carrier is needed to enable antenna pointing via the Point&Play mechanism. When two different pointing carriers are assigned to the terminal, the installer can perform his pointing on two different pointing carriers. At least one pointing carrier must be enabled.

3.7.2.2 View the Satellite Interface Configuration

Maximum two initial receive carrier settings and pointing carrier settings can be assigned and displayed. Only the settings that are enabled are displayed. How to change the satellite interface configuration is described in section 3.7.1.3.

If two settings for a carrier are enabled and displayed, the preferred initial receive carrier is marked by ✓.

If two settings for a carrier are enabled and displayed, the default pointing carrier is marked by ✓. The final selection of the pointing carrier that is used for pointing is done in the Status Page as shown in Figure 17, where the non-default pointing carrier can be selected.

In the example of Figure 23, two initial receive carriers and two pointing carriers are enabled. Initial Receive Carrier 1 is marked as preferred, and Pointing Carrier 2 is set as default.

Configuration for Satellite Interface

Edit

Initial Receive Carrier

	Initial Receive Carrier 1	Initial Receive Carrier 2
Preferred:	✓	
Transport Mode:	DVB-S	DVB-S
Frequency:	3.0000000 GHz	4.0000000 GHz
Symbol Rate:	20.0000 MBaud	20.0000 MBaud
DVB-S2 Roll-off Factor:	35 %	35 %
Population ID:	0	0

Pointing Carrier

	Pointing Carrier 1	Pointing Carrier 2
Default:		✓
Transport Mode:	DVB-S2 (CCM)	DVB-S2 (CCM)
Frequency:	10.8912500 GHz	11.0000000 GHz
Symbol Rate:	22.0000 MBaud	22.0000 MBaud
DVB-S2 Roll-off Factor:	25 %	35 %
Orbital Position:	0.0° East	0.0° West

Figure 23 - Web Interface > View Configuration Satellite Interface

3.7.2.3 The Parameters of the Satellite Interface

The displayed parameters and their descriptions are shown in the table below.

Parameter	Description
Initial Receive Carrier	
Preferred	Mark for the preferred Initial Receive Carrier
Transport Mode	DVB-S; DVB-S2 (Constant Coding Modulation - CCM).
Frequency	Initial receive frequency (GHz)
Symbol Rate	Initial receive symbol rate (Mbaud)
DVB-S2 Roll-off Factor	Only configurable in DVB-S2 mode. Shape of the Rx signal spectrum. 35 %; 25 %; 20 %.
Population Id	Specify the population group to which a terminal belongs. Within a network, one could group terminals on different carriers. The population ID is required to identify the corresponding interactive satellite services. Default value: 0
Pointing Carrier	
Default	Mark for the default pointing carrier
Transport Mode	DVB-S; DVB-S2 (Constant Coding Modulation - CCM).
Frequency	Initial receive frequency (GHz)
Symbol Rate	Initial receive symbol rate (Mbaud)
DVB-S2 Roll-off Factor	Only configurable in DVB-S2 mode. Shape of the Rx signal spectrum. 35 %; 25 %; 20 %.
Orbital Position	Orbital position of the satellite in degrees and East/West selection.

Table 13 - Configuration Page > Satellite Interface Parameters > Initial Receive Carrier

3.7.2.4 Edit the Satellite Interface Configuration

- Click on  in the Web Interface > View Satellite Configuration Interface as shown **Figure 23**.
- Edit the parameters to be changed and as described in **Error! Reference source not found..**



An initial receive carrier setting or pointing carrier setting can only be enabled if the frequency of the configuration is filled in

Initial Receive Carrier

Save

Initial Receive Carrier 1

Initial Receive Carrier 2

Preferred:

☒ Carrier 1

Enabled:

☒ Enabled ☐ Disabled

Transport Mode:

☒ DVB-S ☐ DVB-S2 (CCM)

Frequency:

GHz

Symbol Rate:

MBaud

DVB-S2 Roll-off Factor:

☒ 35 % ☐ 25 % ☐ 20 %

Population ID:

Initial Receive Carrier 2

☐ Carrier 2

Enabled:

☒ Enabled ☐ Disabled

Transport Mode:

☒ DVB-S ☐ DVB-S2 (CCM)

Frequency:

GHz

Symbol Rate:

MBaud

DVB-S2 Roll-off Factor:

☒ 35 % ☐ 25 % ☐ 20 %

Population ID:

Pointing Carrier

Pointing Carrier 1

Pointing Carrier 2

Default:

☐ Carrier 1 ☒ Carrier 2

Enabled:

☒ Enabled ☐ Disabled

Transport Mode:

☐ DVB-S ☒ DVB-S2 (CCM)

Frequency:

GHz

Symbol Rate:

MBaud

DVB-S2 Roll-off Factor:

☐ 35 % ☒ 25 % ☐ 20 %

Orbital Position:

° ☒ East ☐ West

Frequency:

GHz

Symbol Rate:

MBaud

DVB-S2 Roll-off Factor:

☒ 35 % ☐ 25 % ☐ 20 %

Orbital Position:

° ☐ East ☒ West

Warning:

Entering incorrect settings will prevent your modem to logon to the network! Only change satellite configuration settings on request of your Internet Service Provider.

Figure 24 - Web Interface > Edit Configuration Satellite Interface

- Click on **Save** in the Web Interface > Edit Configuration Ethernet interface (Figure 24) to save the new settings;

The satellite interface configuration is now saved and the changes in the configuration are displayed.

Changing initial carrier 1 frequency from 30000000 to 130000000.

Changing initial carrier 1 symbol rate from 200000 to 120000.

Changing initial carrier 2 frequency from 40000000 to 110000000.

Changing initial carrier 2 symbol rate from 80000 to 40000.

The configuration was updated.

Changes may not take effect until after the next [reboot](#).

Figure 25 – Example of Satellite Interface Configuration Changes

- Click on **reboot** at the bottom of the page;
- Click on **Normal Reboot** to confirm and execute the reboot;

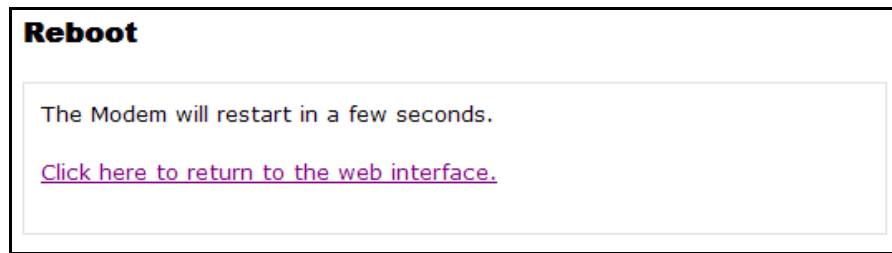


Figure 26 – Reboot in Progress

- Click on **Click here to return to the web interface** and wait a few minutes.

The satellite interface configuration is now effective.

3.7.3 Multicast

The satellite can send several sessions to a number of HELLAS SAT terminals at the same time.

This is IPmulticasting. There are two configurations possible in the HELLAS SAT terminal to receive these programs:

- Static IP addresses: these are IP addresses where the sessions are received. You will be provided with these addresses if needed;
- IGMP: this is a protocol that lets you receive multicast sessions (maximum 10) without entering specific IP addresses.

3.7.3.1 View the Multicast Configuration

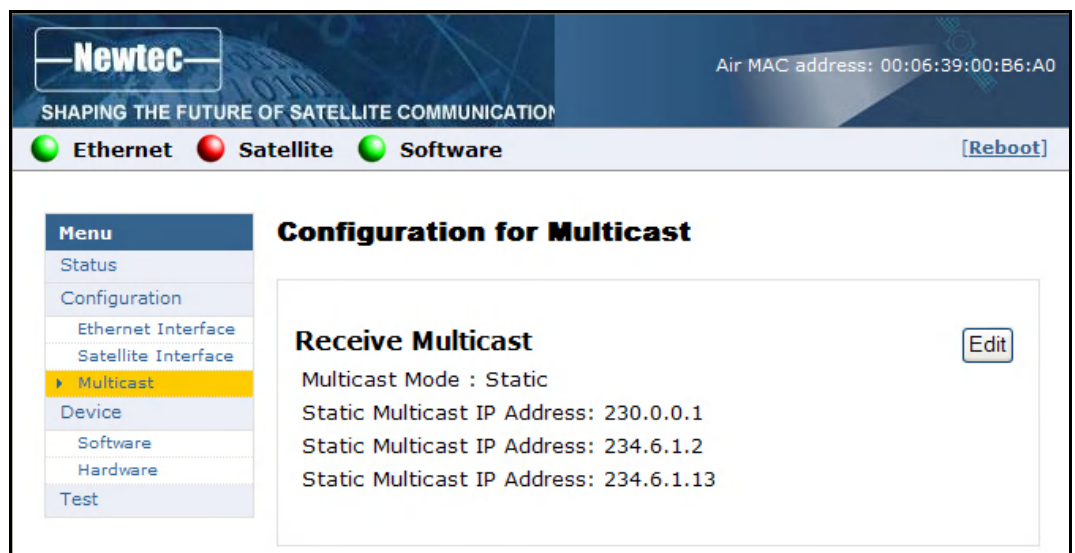


Figure 27 - Web Interface > View Configuration Multicast

3.7.3.2 The Multicast Parameters

The displayed parameters and their description are shown below.

Parameter	Description
Multicast Mode	Disabled: Multicast mode is disabled. Static: The active Multicast Configuration is based on entered Static Multicast IP Addresses. IGMP Dynamic: Dynamic IGMP multicast mode.
Static Multicast IP Address 1-10	Maximum 10 multicast IP Addresses can be assigned and active in case of Static Multicast Mode.

Table 14- Configuration Page > Multicast parameters

3.7.3.3 Edit the Multicast Configuration

Figure 28 – Web Interface > Edit Multicast Configuration

- Click on **Edit** in the Web Interface > View Multicast configuration (Figure 27) to Change the Ethernet Settings;
- Edit the parameters to be changed;
- Click on **Save** in the Web Interface > Edit Multicast configuration (Figure 28) to save the new settings.

The Multicast configuration is now saved!

The response screen for a Disabled Multicast configuration:

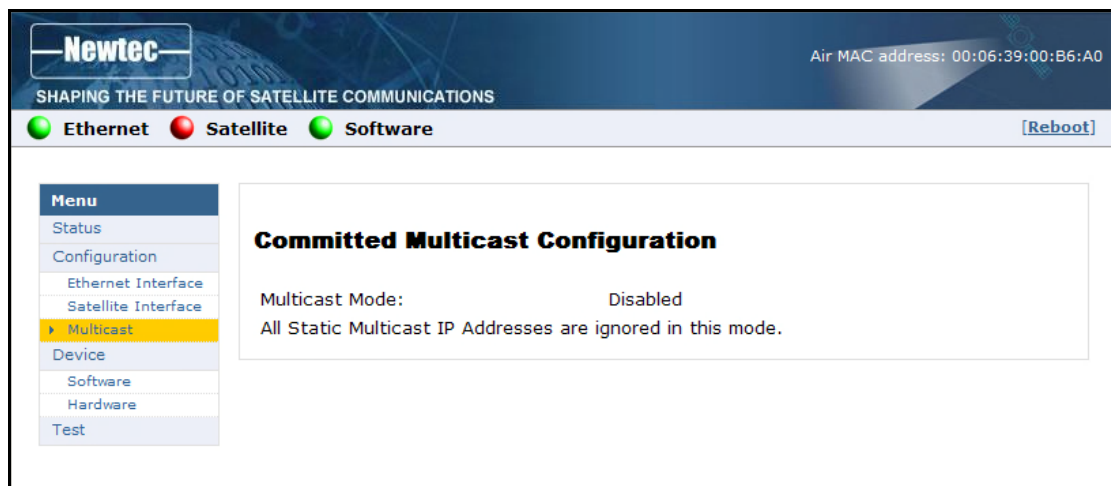


Figure 29 – Web Interface > Confirmation of Disabled Multicast Configuration

The response screen for a Static Multicast Configuration with invalid IP addresses:

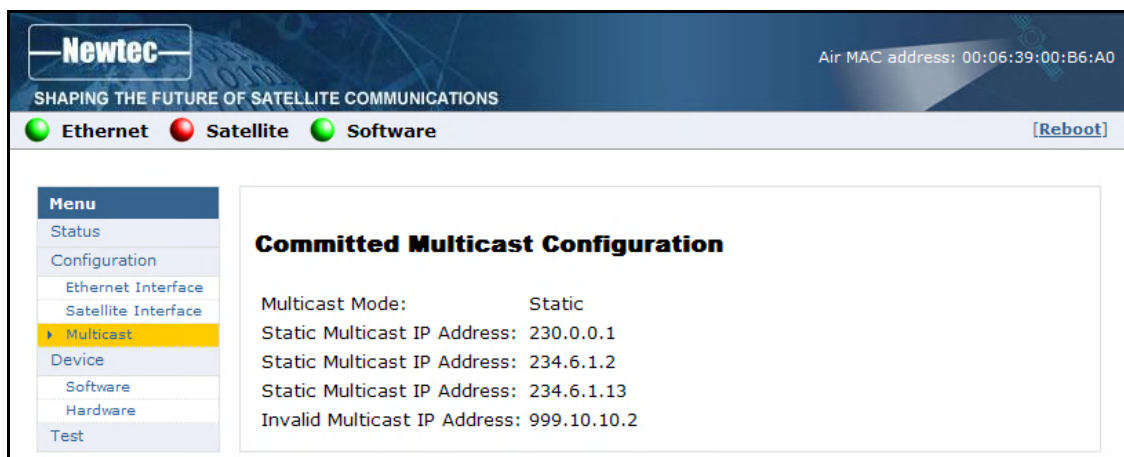


Figure 30 – Web Interface > Static Multicast Configuration with Invalid Multicast IP Addresses

In case an invalid multicast IP address is replacing a valid multicast IP address, the last valid multicast IP address will still be in use.

The response screen for a Committed Multicast configuration:

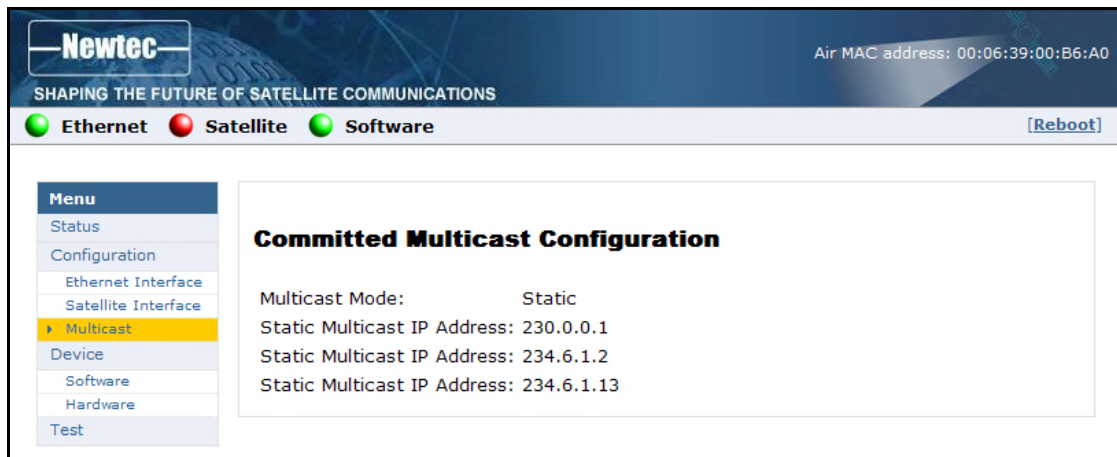


Figure 31 – Web Interface > Confirmation Committed Multicast Configuration

3.8 Device

3.8.1 Software

3.8.1.1 Introduction – General Case

The terminal software is automatically upgraded over the satellite without any user interaction. In general, the only requirement for an upgrade to be successful is for the terminal to have satellite connectivity during the time of upgrade.

To allow a secure terminal software upgrade mechanism, the flash of the modem can contain two different software versions. A newly installed software version has to pass an automatic software validation procedure. After a software upgrade, the IPmodem is automatically reset.

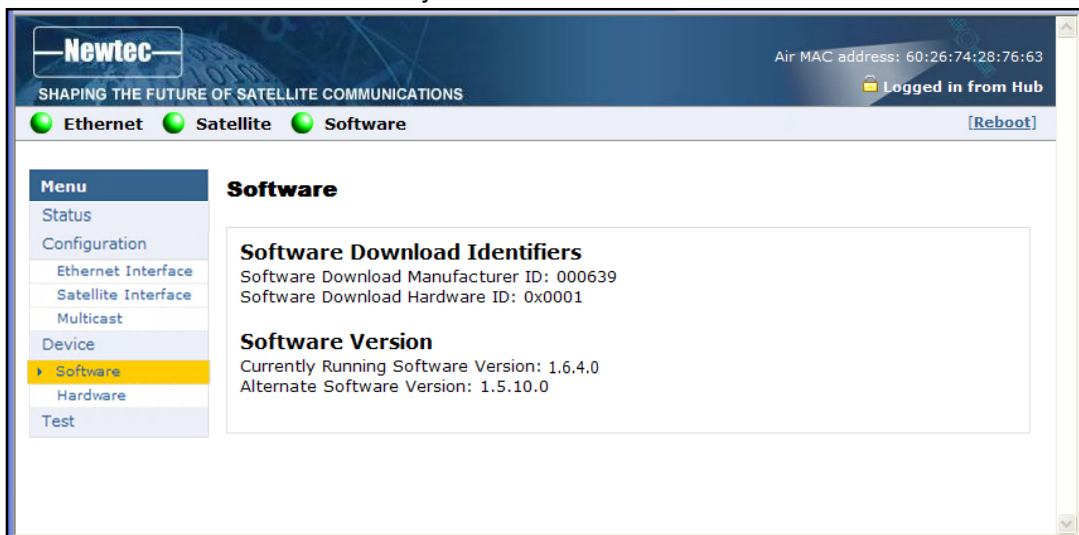


Figure 32 - Web Interface > View Software Configuration

Table 15 gives a description of the parameters in the Software menu:

Parameter	Description
Software Download Identifiers To uniquely identify the terminal variant for software download triggered from the hub side, the following keys are reserved for SW update.	
Software Download Manufacturer ID	Software download manufacturer Identifier (639 for Newtec devices)
Software Download Hardware ID	Software downloads hardware Identifier.
Software version	
Currently Running Software Version	The currently installed software version is displayed. When an alternate software version is available, you will be provided with a link Try Alternate Version.
Alternate Software Version	Only displayed when an alternative software version is present.

Table 15 - Software Page

3.8.1.2 Software Upgrade

A newly installed software version must pass an automatic software validation procedure. When this software validation process fails, the old software version remains in use. The passive bank now contains a newer software version that did not pass the validation process. In this case, the user has the possibility to re-trigger the validation process. This situation can occur when a user turns off his IPmodem during the validation process or when satellite connectivity was not possible to establish during the validation process.



It is possible that the terminal performs a **software update** during the first logon. This process can take **up to ten minutes**. You may **NOT interrupt** the terminal yourself during this period by e.g. rebooting or powering down



Figure 33 - Web Interface > Software (Alternate Version)

To re-trigger the validation process:

- Click the link **Try Alternate Version**;

The *Software Upgrade* page will be displayed indicating the new software version number (see below).

- If the web interface doesn't refresh automatically, navigate back to the *Status* page.

A total reboot, including satellite link initialisation might take up to 1 minute.

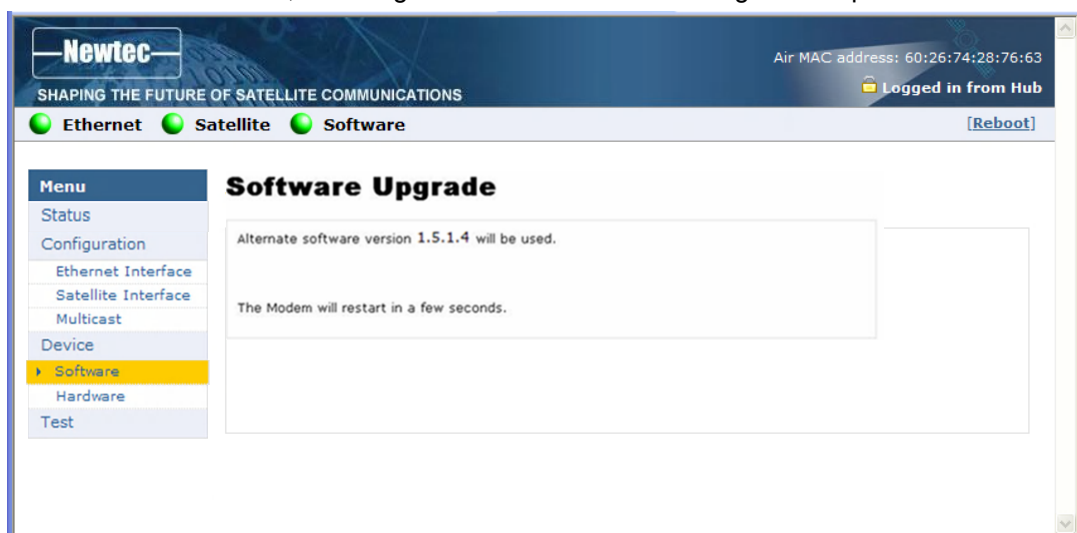


Figure 34 - Web Interface > Software Upgrade Confirmation



When a newer version is present and validation fails, the software LED is red.

Also read section **Error! Reference source not found.** for more information on the meaning of the software status LEDs

3.8.2 Hardware

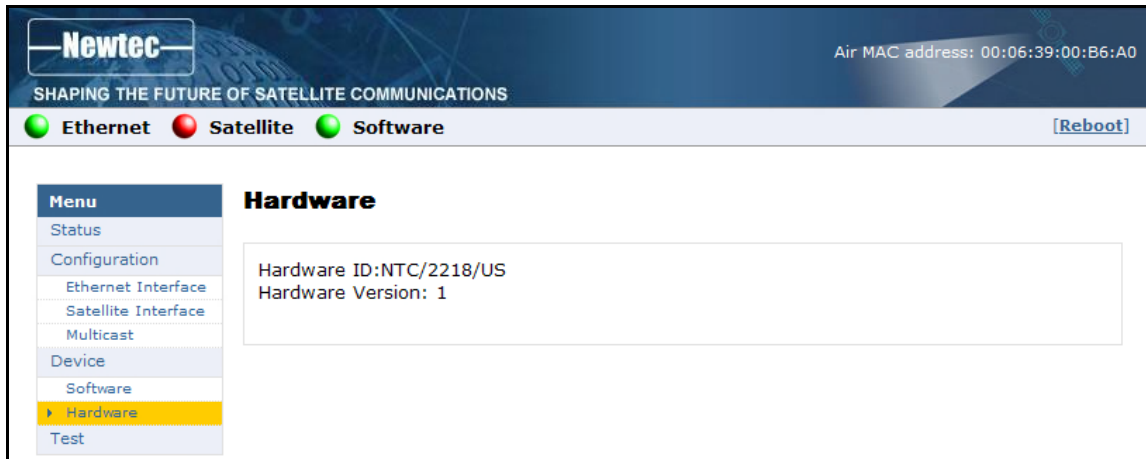


Figure 35 - Web Interface > Hardware

Below are given the displayed parameters and their description.

These values are read only.

Parameter	Description
Device	
Hardware ID	Hardware identifier of the modem
Hardware Version	Hardware version number of the modem

Table 16 - Configuration Page > View Hardware Parameters

3.9 Test

To view the functioning status of the HELLAS SAT Terminal, or to identify problems that may occur, tests can be run on the terminal:

Tests

Tests started 17 07 36 seconds ago.

Software test

☒ Software test

Ethernet/LAN test

☒ Ethernet test

Satellite connection test

☒ Physical layer test

☒ Data link layer test

☒ Network layer test

Traffic test

☒ Ping traffic test

Ping packet size (bytes):

Number of pings:

☒ DNS traffic test

☒ Http GET traffic test

Figure 36 – Web Interface > Test Overview

Mark (☒) or unmark (☐) a test depending on the tests to be run.

Section 3.9.3 gives a description of the tests which can be performed.

Click on the -button to begin the test.

3.9.1 On Screen Test Results

As a result, a screen with the requested test results will be shown, see Table 17 – Possible States of IPmodem Tests.

Running test	
Test waiting to run	
Successfully ran test	
Unsuccessfully ran test	

Table 17 – Possible States of IPmodem Tests

Tests

Tests started 1913119 seconds ago.

Software test
☒ Software test

running software version: 1.5.1.3
alternative software version: 0.0.47.0

Ethernet/LAN test
☒ Ethernet test

link up, 100baseTx-FD

Satellite connection test
☒ Physical layer test
☒ Data link layer test
☒ Network layer test

no demodulator lock


Traffic test
☒ Ping traffic test
Ping packet size (bytes):
Number of pings:
☒ DNS traffic test
☒ Http GET traffic test

Start test

Export to text file

Figure 37 – On-Screen Test Results

3.9.2 Filed Test Results

Click on the -button to begin the test. As a result, a web page with the test results in text format will be provided. The test results can now be saved in a text file from the browser, as shown in Figure 38.

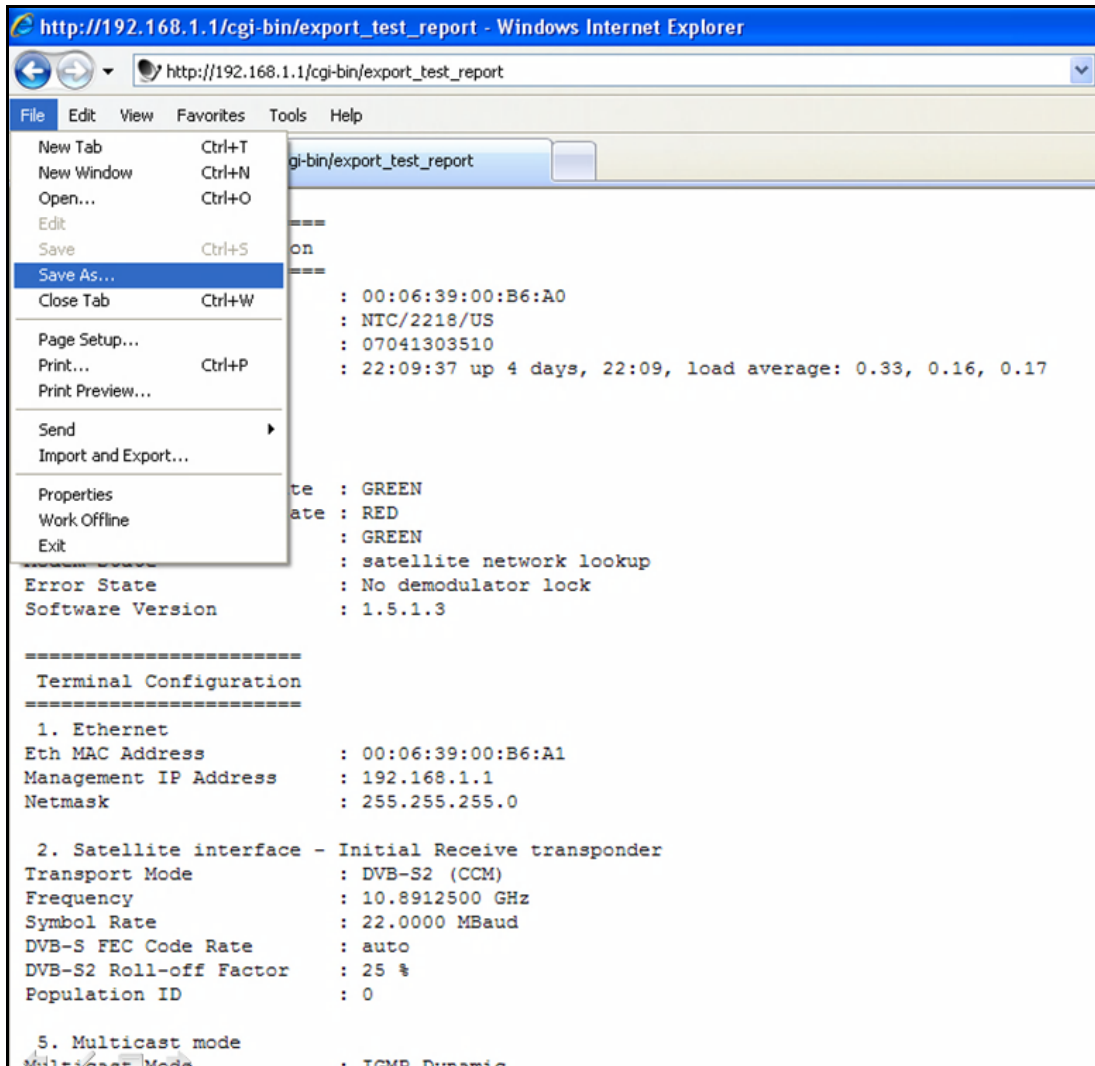


Figure 38 – Web Interface > Test > Export to Text File

3.9.3 Test Descriptions

This section provides an overview of the tests that can be run on the IPmodem.

3.9.3.1 Software Test

The Software test verifies the validity of the software.

3.9.3.2 Ethernet/LAN Test

The Ethernet/LAN exists of three tasks:

- Checking the Ethernet physical layer;
- Obtaining the IP address off the computer connected to the IPmodem;
- Checking the IP address of the computer, provided via DHCP by the IPmodem.

3.9.3.3 Satellite Connection Test

The Satellite connection test is composed of three tests:

- The Physical layer test, checks if the physical layer of the IPmodem – satellite connection is able to receive data;
- The Data link layer test, checks if the HELLAS SAT system is able to send data to the satellite;
- The Network layer test, checks the IP connection.

3.9.3.4 Traffic Test

The Traffic test is composed of three tests:

- A ping traffic test, tests if ping packets can be transported over the network from the IPmodem, over the satellite to the hub site.
The following fields can be filled in:
 - Ping packet size (bytes): minimum 1 and maximum 65,507 bytes;
 - Number of pings: minimum 1 and maximum 100.
- The DNS traffic test resolves a URL via a name server at the hub site.

The Http GET traffic test, verifies the TCP acceleration and pre-fetching.

4 APPENDIX A - LOCAL NETWORK CONFIGURATION

The following provides an overview of IP network configurations. The situation is explained for connecting a single computer to the IPmodem or for connecting a router with its own LAN to the IPmodem.

To correctly interpret the figures, keep in mind the following convention:

- Private IP address
- Public IP address

Figure 39 - Network Configuration Legend

4.1 Connect a Single Computer to the IPmodem

Once the computer is connected to the IPmodem's Ethernet interface, set the computer's IP settings to **DHCP enable**.



Please refer to section 5 for a detailed explanation on how to change the IP settings

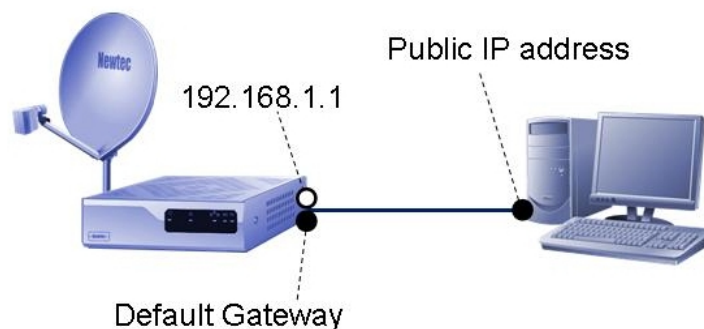


Figure 40 - CPE Network Configuration > Single Computer

The IPmodem web interface can be reached on:

- 192.168.1.1 (default web interface address);
- The Default Gateway address.



We recommend using a Software fire-wall on the computer which is connected to the IPmodem.

To know the Default Gateway address, type the `ipconfig` command in the command line interface

4.2 Connect a LAN to the IPmodem

To connect the IPmodem to a network, a router is needed. The IPmodem has to be connected to the Internet/WAN interface of the router. In the router configuration, the Internet/WAN interface must be set to DHCP mode. Please refer to the router's manual for a description of how to set the Internet interface to DHCP mode and how to connect the router to your LAN (local area network).



Please refer to section 5 for a detailed explanation on how to change the IP settings

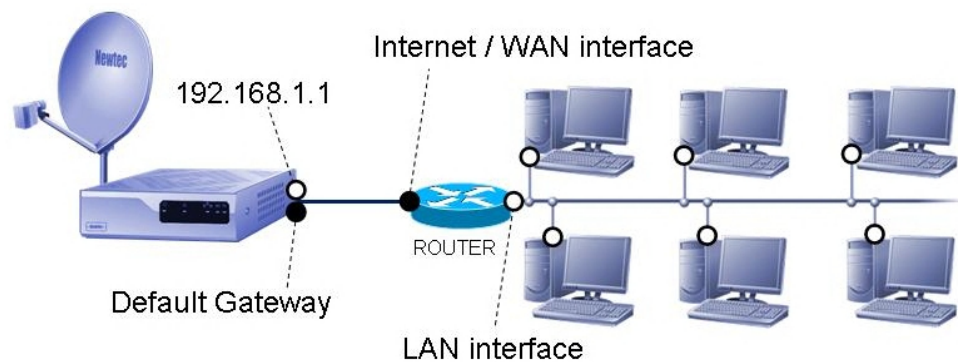


Figure 41 - Network Configuration > LAN



The IPmodem web interface is accessible through the IPmodem default gateway. The IPmodem default gateway address can be looked up through the router's web interface.

Please refer to your router's manual for a description of how to look up the default gateway address.


5 APPENDIX B – CHECKING AND CHANGING YOUR IP SETTINGS

5.1 Introduction


The following sections describe how to check if your computer is able to receive an IP address via DHCP. The sections also describe how to change your IP settings to enable your computer to accept an IP address assigned by the IP modem.

5.2 Windows Vista


- Open the Start Menu and select Control Panel;

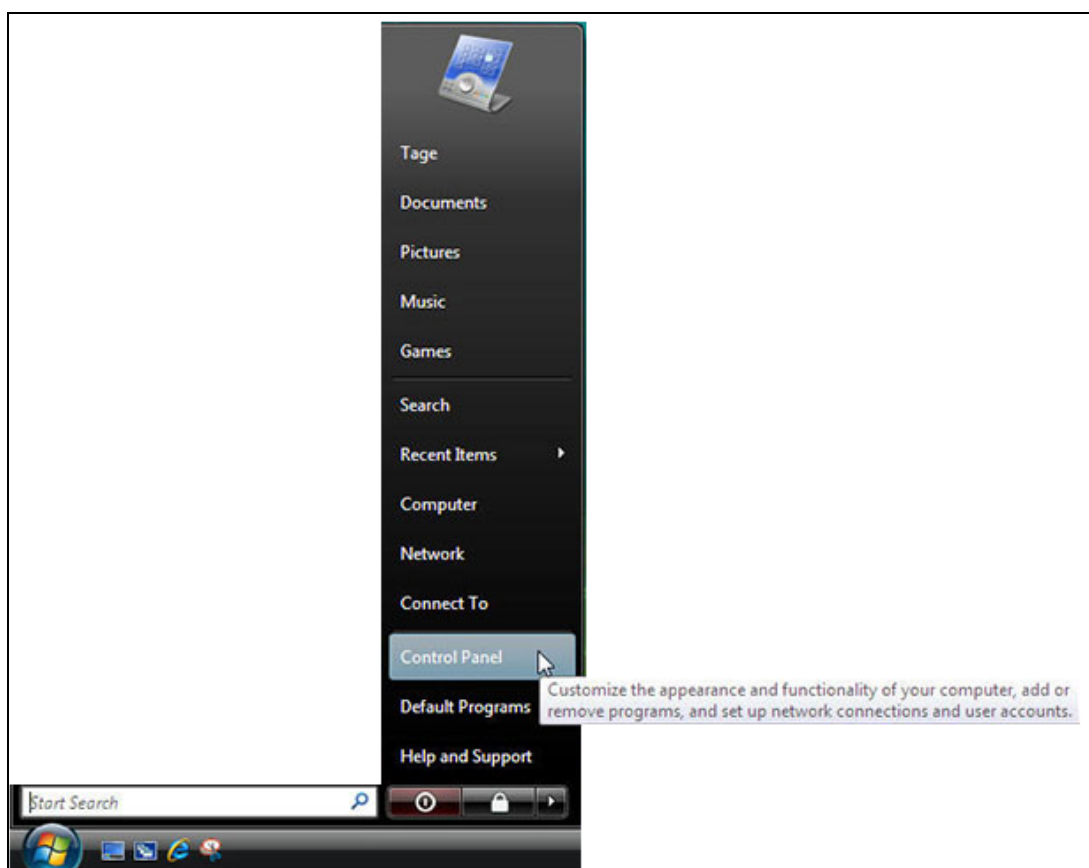


- Select the option View network status and tasks;

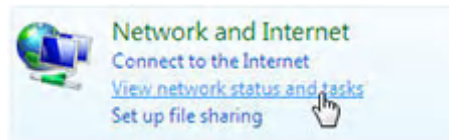


- Select Manage network Connections;

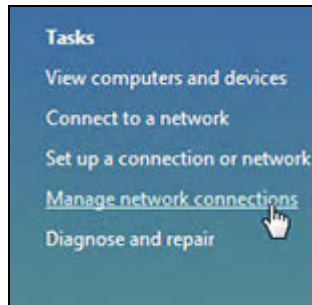


- Double click on Local Area Connection;

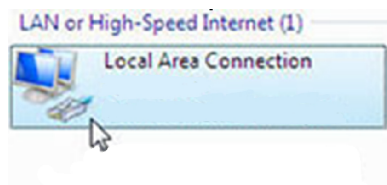

- Select the button **Properties** at the bottom;
- Select **Internet Protocol Version 4 (TCP/IPv4)**;

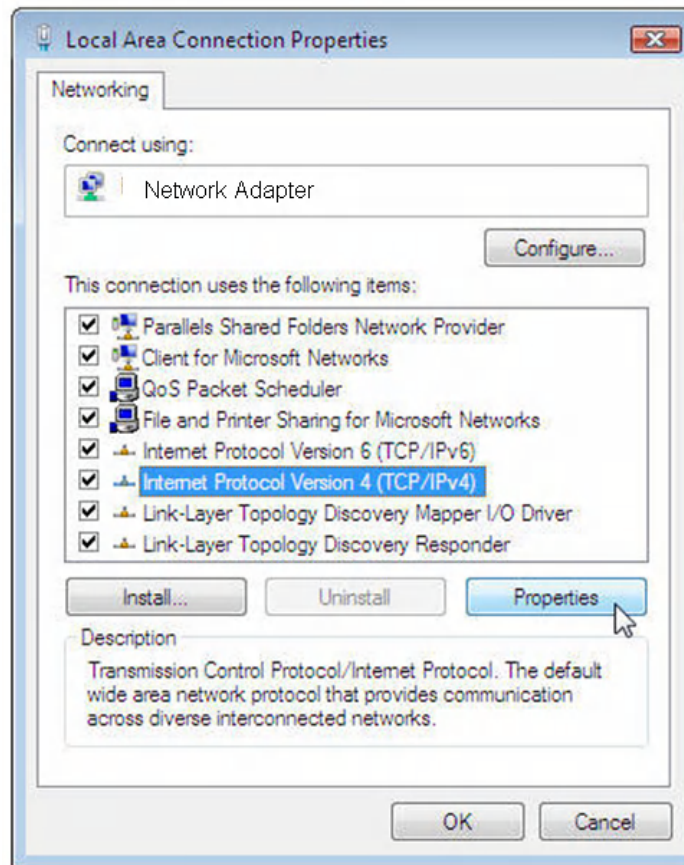


- Select Properties;
- Make sure “Obtain an IP address automatically” and Obtain DNS server address automatically are selected;

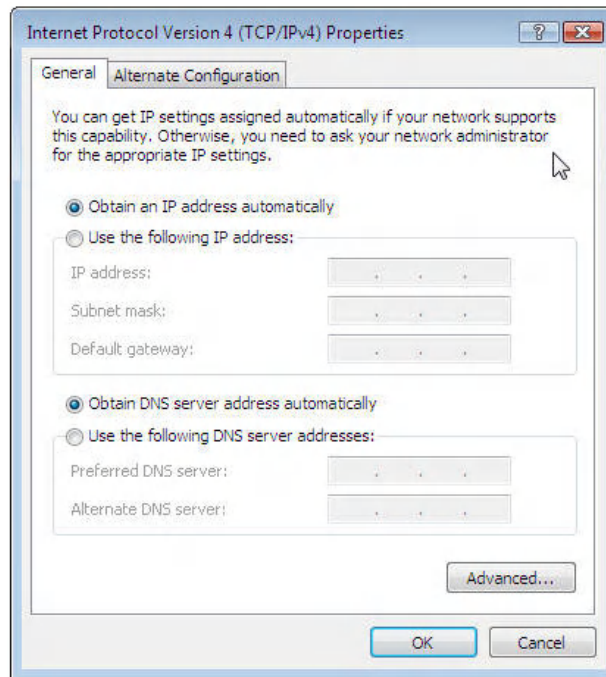


- Click the **OK** button.

5.3 Windows XP

- Open the Start Menu and select Control Panel;
- Open the Network Connections window;
- Right click on the active LAN connection and select Properties; The Local Area Connections Properties dialogue will open.

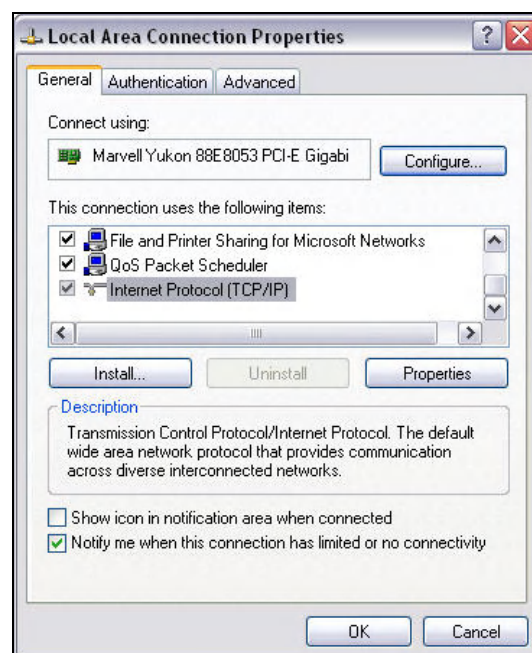

- Select the tab **General**;
 - Scroll down the items and select **Internet Protocol (TCP/IP)**;
 - Click the **Properties** button;
- The **Internet Protocol (TCP/IP) Properties** dialogue will open.
- By default, the dialogue is set as shown below

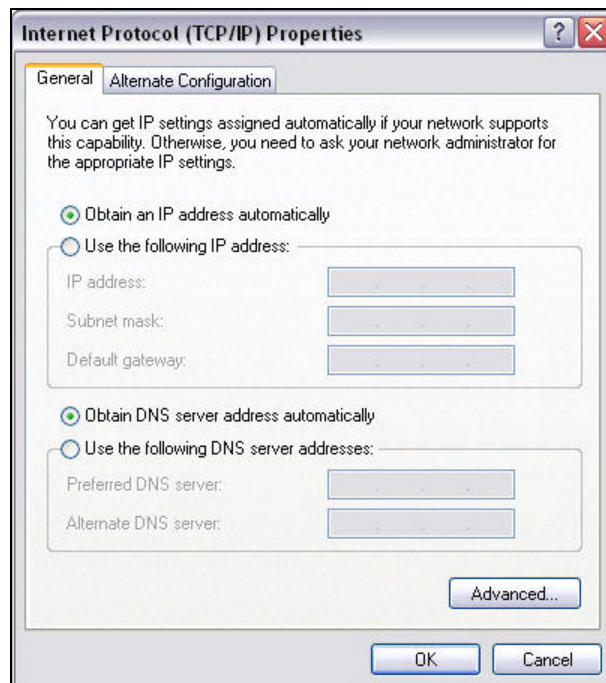

- Select the tab **General**;

If the radio button **Obtain an IP address automatically** is selected, your computer is able to receive an IP address.


If the radio button **Obtain an IP address automatically** is not selected:

- Select the radio button **Obtain an IP address automatically**;
- Click the **OK** button.


Your computer will now be able to accept an IP address from the IP modem.

5.4 Mac OS X


- Click on your **Apple** menu and choose **System Preferences**:

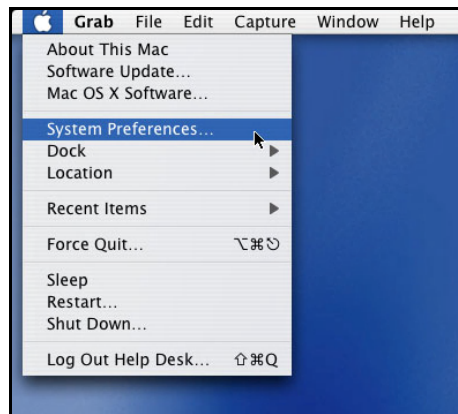

- Double-click on the **Network** icon;

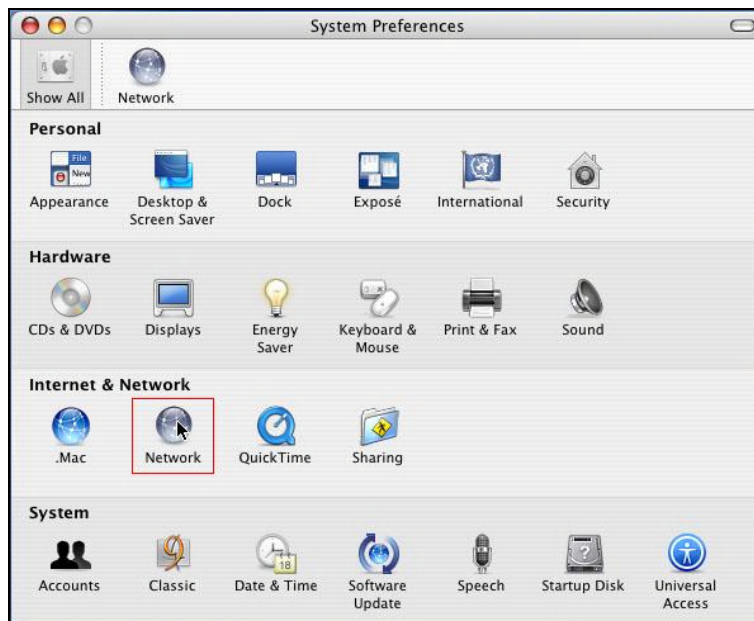

- Click on the adapter that you wish to change (usually *Built-in Ethernet*) and then click the **Configure...** button

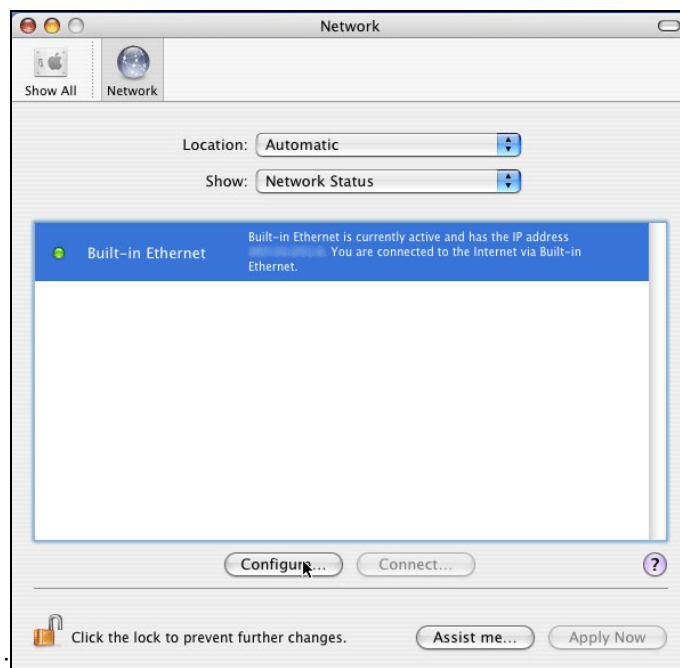

- Go to the **TCP/IP** tab. If your computer is configured to use a dynamic IP address, you should see a screen such as the one below (notice **Using DHCP** in the drop-down box next to **Configure**);



- This is where you can change your DNS settings, by entering the appropriate DNS servers in the **Domain Name Servers (Optional)** box;
- If not already selected, select **Using DHCP** from the drop down box called **Configure** in the **TCP/IP** tab. You should get a screen shot as above;
- Apply your settings by clicking the **Save** button.

6 APPENDIX C – TROUBLESHOOTING GUIDE



We would appreciate any useful feedback that can help us to complete this section

Problem indication	Possible solution
No connectivity with IPmodem web interface. LED error indication: The Rx indicator LED is off The Warning LED is orange	The IPmodem has no connectivity with the satellite network (section Error! Reference source not found.). Check if the computer can receive an IP address via DHCP, as described in Section 5. If the computer can receive an IP address: unplug the Ethernet cable from your computer, wait for more than 3 minutes and plug the Ethernet cable in, again.
Web interface error info: Modem State : idle Modem LED is red	Your modem has not been pointed. Consult the Point&Play manual to execute the pointing process.
Web interface error info: Modem State : antenna pointing	Your modem is currently in the pointing state. Consult the Point&Play manual to execute the pointing process.
Web interface error info: No demodulator lock Modem LED is red LED error indication: The RX indicator LED is off	Error in handling of the Rx signal. The Rx demodulator cannot lock. Verify the pointing of the antenna. Verify the connectivity between the IPmodem and the antenna. Verify the configuration of the satellite interface: frequency, polarisation, symbol rate...
Error information in the web interface: Network lookup failed LED error indication: Warning LED is on, RX LED is o	If the IPmodem could not login to the satellite network, maybe the result of pointing to a wrong satellite. Verify the configuration of the satellite interface: If the pointing data is correct, check if the antenna is pointed correctly. Re-point if necessary. Reset the IPmodem. Contact the ISP if this error is persistent for more than four hours.

Problem indication	Possible solution
Error information in the web interface: Network look-up failed - RMT table lookup failed (verify Population Id) LED error indication: Warning LED is on, RX LED is on	The satellite network look-up phase failed because an error occurred in the parsing of the RCS Map Table. Verify the configuration of the population id in the configuration – satellite interface.
Error information in the web interface: Synchronisation process failed LED error indication: Warning LED is on, RX LED is on	The time synchronisation process failed. Reset the IPmodem (section Error! Reference source not found.). Contact your ISP if this error is persistent for more than four hours. The error can be an indication of a general network problem
Error information in the web interface: Synchronisation lost LED error indication: Warning LED is on, RX LED is on	The time synchronisation is lost. Reset the IPmodem (section Error! Reference source not found.). Contact your ISP if this error is persistent for more than four hours. The error can be an indication of a general network problem.
Error information in the web interface: Network login failed Error information on the IPmodem: LED error indication: Warning LED is on, RX LED is on.	The IP modem could not login to the satellite Verify if the TX cable is correctly connected. If the TX cable is correctly connected and the error is still occurring after a number of hours, contact your ISP : - to report the problem; - to check if your IPmodem is provisioned in the network
Error information in the web interface: Network Layer configuration failed LED error indication: Warning LED is on, RX LED is on	An error occurred during the configuration of the network layers after a valid satellite network login. Reset the IPmodem (section Error! Reference source not found.). Contact your ISP if this error is persistent for more than four hours.
Error information in the web interface: TCP acceleration service failed LED error indication: Warning LED is on, RX LED is on	An error is detected in the TCP acceleration service. Reset the IPmodem. Reset the IPmodem (section Error! Reference source not found.) Contact your ISP if this error is persistent for more than four hours.

Problem indication	Possible solution
Error information in the web interface: Network connectivity lost LED error indication: Warning LED is on, RX LED is on	The connectivity with the satellite network is lost. Reset the IPmodem. Reset the IPmodem (section Error! Reference source not found.) Contact your ISP if this error is persistent for more than four hours.
Error information in the web interface: • Installation carrier setup failed LED error indication: • Warning LED is on, RX LED is on	The activation of the installation carrier test mode failed because the terminal was not in the correct state.

Table 18 – Troubleshooting Table

7 APPENDIX D – ACRONYMS

Acronym / term	Description
8PSK	8 Phase Shift Keying
AC	Alternating Current
ARP	Address Resolution Protocol
ATM	Asynchronous Transfer Mode
BER	Bit Error Rate
C/N	Carrier to Noise ration
CCM	Constant Coding Modulation
CE approved	Conformité Européenne (European health & safety product label)
DC	Direct Current
DHCP	Dynamic Host Configuration Protocol
DVB	Digital Video Broadcasting
DVB-RCS	Digital Video Broadcasting – Return Channel Satellite
DVB-S, DVB-S2	Digital Video Broadcasting over Satellite (2)
FCT	Frame Composition Table
FEC	Forward Error Correction
FTP	File Transfer Protocol
GMSK	Gaussian Minimum Shift Keying
HTTP	Hyper Text Transfer Protocol
ICMP	Internet Control Message Protocol
iLNB	Interactive Low Noise Block-down converter
IP	Internet Protocol
ISP	Internet Service Provider
IT	Information Technology
LAN	Local Area Network
LED	Light Emitting Diode
LNB (iLNB)	Low Noise Block-down converter
MAC address	Medium Access Control
MF-TDMA	Multi Frequency Time Division Multiple Access
NCR	Network Clock Reference

Acronym / term	Description
NIT	Network Information Table
Nm	Newton metre
PAT	Program Association Table
PMT	Program Map Table
QPSK	Quadrature Phase Shift Keying
RCS	Return Channel Satellite
RF	Radio Frequency
RMT	RCS Map Table
Rx	Receive
SAP	Satellite Access Provider
SCT	Superframe Composition Table
SDT	Service Descriptor Table
TBTP	Time Burst Time Plan
TCP (TCP/IP)	Transmission Control Protocol
TCT	Time Composition Table
Tx	Transfer
UDP	User Datagram Protocol
VSAT	Very Small Aperture Terminal
WCT	Waveform Composition Table

Table 19 - Acronyms

8 APPENDIX E – SPECIFICATIONS

8.1 IPmodem (indoor unit)

Forward Channel

- Modulation/coding
 - DVB-S
 - Rate 1/2, 2/3, 3/4, 5/6, 7/8 (QPSK)
 - DVB-S2 CCM
 - Rate 1/2, 2/3, 3/4, 5/6, 7/8 (8PSK)
 - Rate 1/2, 2/3, 3/4, 5/6, 7/8 (QPSK)
- Symbol rate
 - DVB-S : 1-45 Mbaud
 - DVB-S2 : 3-30 Mbaud
- MPEG TS rates
 - 1-80 Mbps

Return Channel

- Modulation/coding
 - GMSK BT = 0.5
 - Rate 1/2, 2/3, 3/4 Turbo (GMSK)
- Symbol rate
 - 128, 256 Kbaud
- ATM data rates
 - 143 kbps

IDU and IFL Interface

- RF In
 - Connector: F (female)
 - Impedance: 75 Ohm
 - Acquisition range : +/- 5 MHz
 - Frequency: 950 – 2100 MHz
 - Rx level: -65 to -25 dBm
- RF Out
 - Connector: F (female)
 - Impedance: 75 Ohm
 - Frequency: 2750-2900MHz (Ku band)
 - Tx level: 0 dBm

Performance

- IP data Throughput
 - Up-to2 Mbit/s IP forward
 - Up-to 143 kbit/s ATM return

Management

- Web GUI

LAN interfaces

- Ethernet 10/100 baseT (RJ-45 connector)

Standards

- EN 302307: DVB-S2
- EN 300421: DVB-S
- EN 301790: DVB-RCS
- EN 50478: SATMODE
- EN 301428: VSAT spectrum usage
- IEEE 802.3: 10T Ethernet
- IEEE 802.3: 100TX Ethernet

Routing Protocol

- RFC 768: UDP
- RFC 791: IP
- RFC 792: ICMP
- RFC 793: TCP
- RFC 826: ARP
- RFC 959: FTP
- RFC 2131: DHCP
- RFC 2186, 2187: Caching protocols
- RFC 2096: IP forwarding

Power Supply

- Power supply: 210-260 VAC, 50 Hz

Environment

- Operational: 0 to 40 deg C * non condensing
- Storage: -40 to 70 deg C up to 95% condensing
- Humidity: 10% to 70% (non-condensing)

Sizes

- 190 x 50 x 167 mm

8.2 iLNB (outdoor unit)

Interface

- RF Out
 - EIRP NOMINAL: $35.8 + 20 \cdot \log(f/14 \text{ GHz})$ dBW (with 75 cm antenna)
 - Frequency range: 13.75 – 14.5 GHz (Ku Band)
 - Polarisation: linear and orthogonal to Rx
- RF In

- Frequency: 10.7 – 12.75 GHz
- Polarisation Selection: Physical Mounting

Environment

- The ODU operates nominally under the following conditions:
 - Ambient Temperature: -30 to +60 °C
 - Weather protection: IP67
 - Humidity: 0% to 100% (condensing)
 - Solar Radiation: 500 W/m² maximum
 - Rain: Up to 40 mm/h
 - Wind: Up to 80 km/h no deterioration
 - Survival wind speed: 180 km/h

Performance

- Transmission Characteristics
 - Output Power (nominal): + 27 dBm typ., 25.5 dBm min.
- Receiver Transfer Characteristics
 - G/T clear weather: 14 dB/K
 - Gain (over temp. & freq.): 57 to 70 dB $\pm$ 0.5 dB/10° 2-160 kbps

9 APPENDIX F - LICENSES

GNU software is used in this product:



You can download GNU Wget from the following location:
<http://www.gnu.org/software/wget/>



For more information about GPL: check out our website at
<http://www.newtec.eu/index.php?id=gpl>